

## Instructions | Floral Shadows

Shadow Work the Floriani Way




1.) Place one piece of Floriani Wet-N-Gone Tacky stabilizer in the embroidery frame with the paper side facing up.

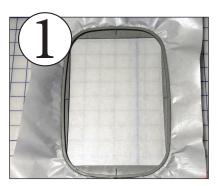

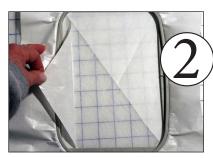

2.) Score the release paper and peel it back to the edge of the hoop revealing the sticky surface of the stabilizer.

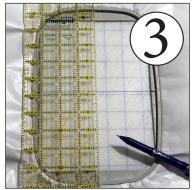


3.) Find and mark the center of your hoop using a ruler and fabric safe marking pen such as water soluble or heat Frixion® pen.



4.) Lay a piece of regular Wet-N-Gone stabilizer down onto the tacky stabilizer. Make sure the piece of Wet-N-Gone stabilizer is slightly larger than the overall design you are stitching. (Make sure the shadow work portions of the design will stitch onto the Wet-N-Gone stabilizer completely)



5.) Stitch the Shadow Work portion(s) of your design directly onto the Wet-N-Gone stabilizer.

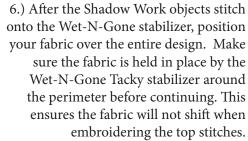







7.) Stitch out remaining colors and your design should look similar to this inside the hoop when stitching is complete.


#### Shadow Work the Floriani Way

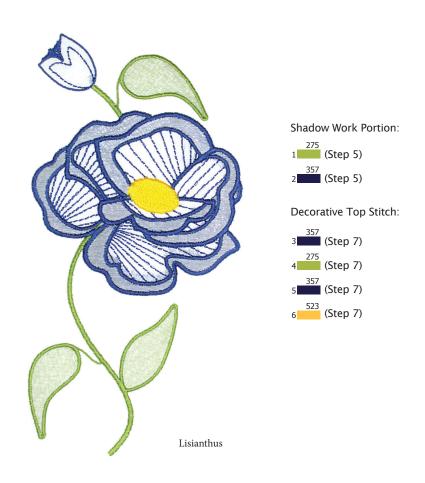


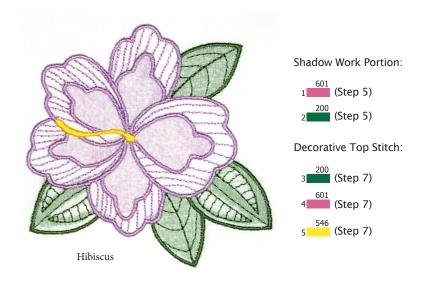




#### Shadow Work the Floriani Way

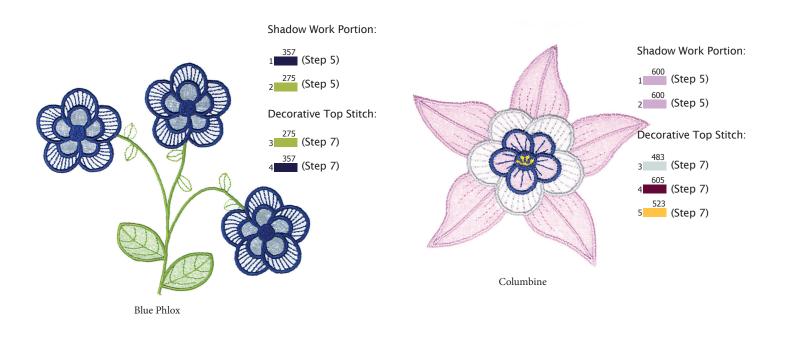


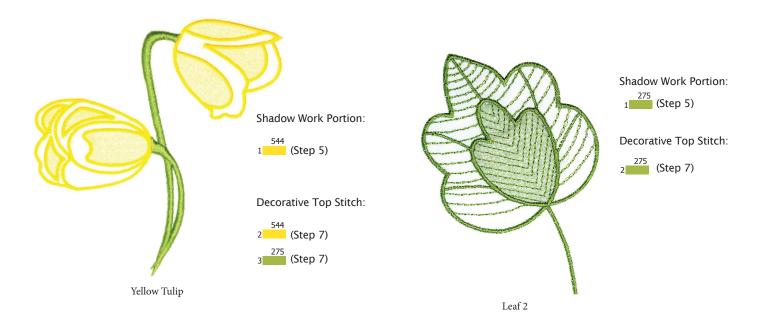




#### Shadow Work the Floriani Way

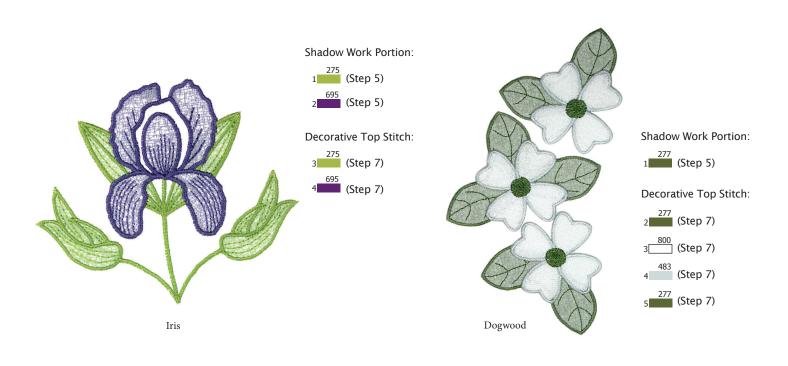


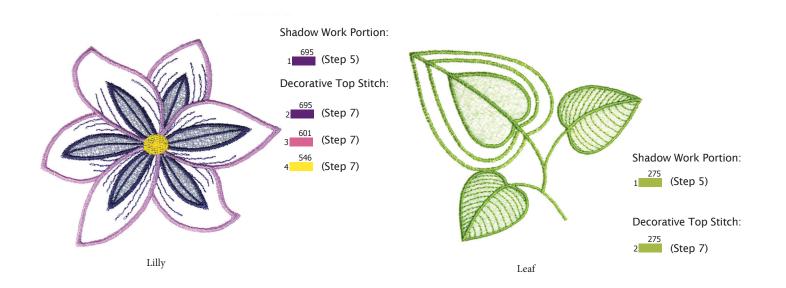




Shadow Work the Floriani Way

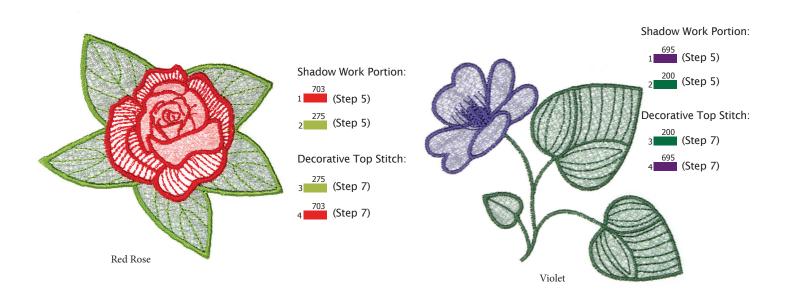

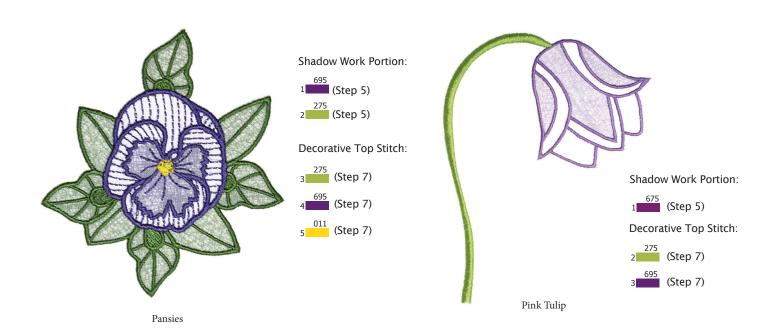





Shadow Work the Floriani Way

**Note** — These designs do not contain Shadow Work.





